TOP AND CONSOLE PARTS

27"ELECTRIC DRYER

For Models: GEQ8811PW0, GEQ8811PG0, GEQ8811PL0
(White/Grey) (Biscuit/Gold) (Pewter)

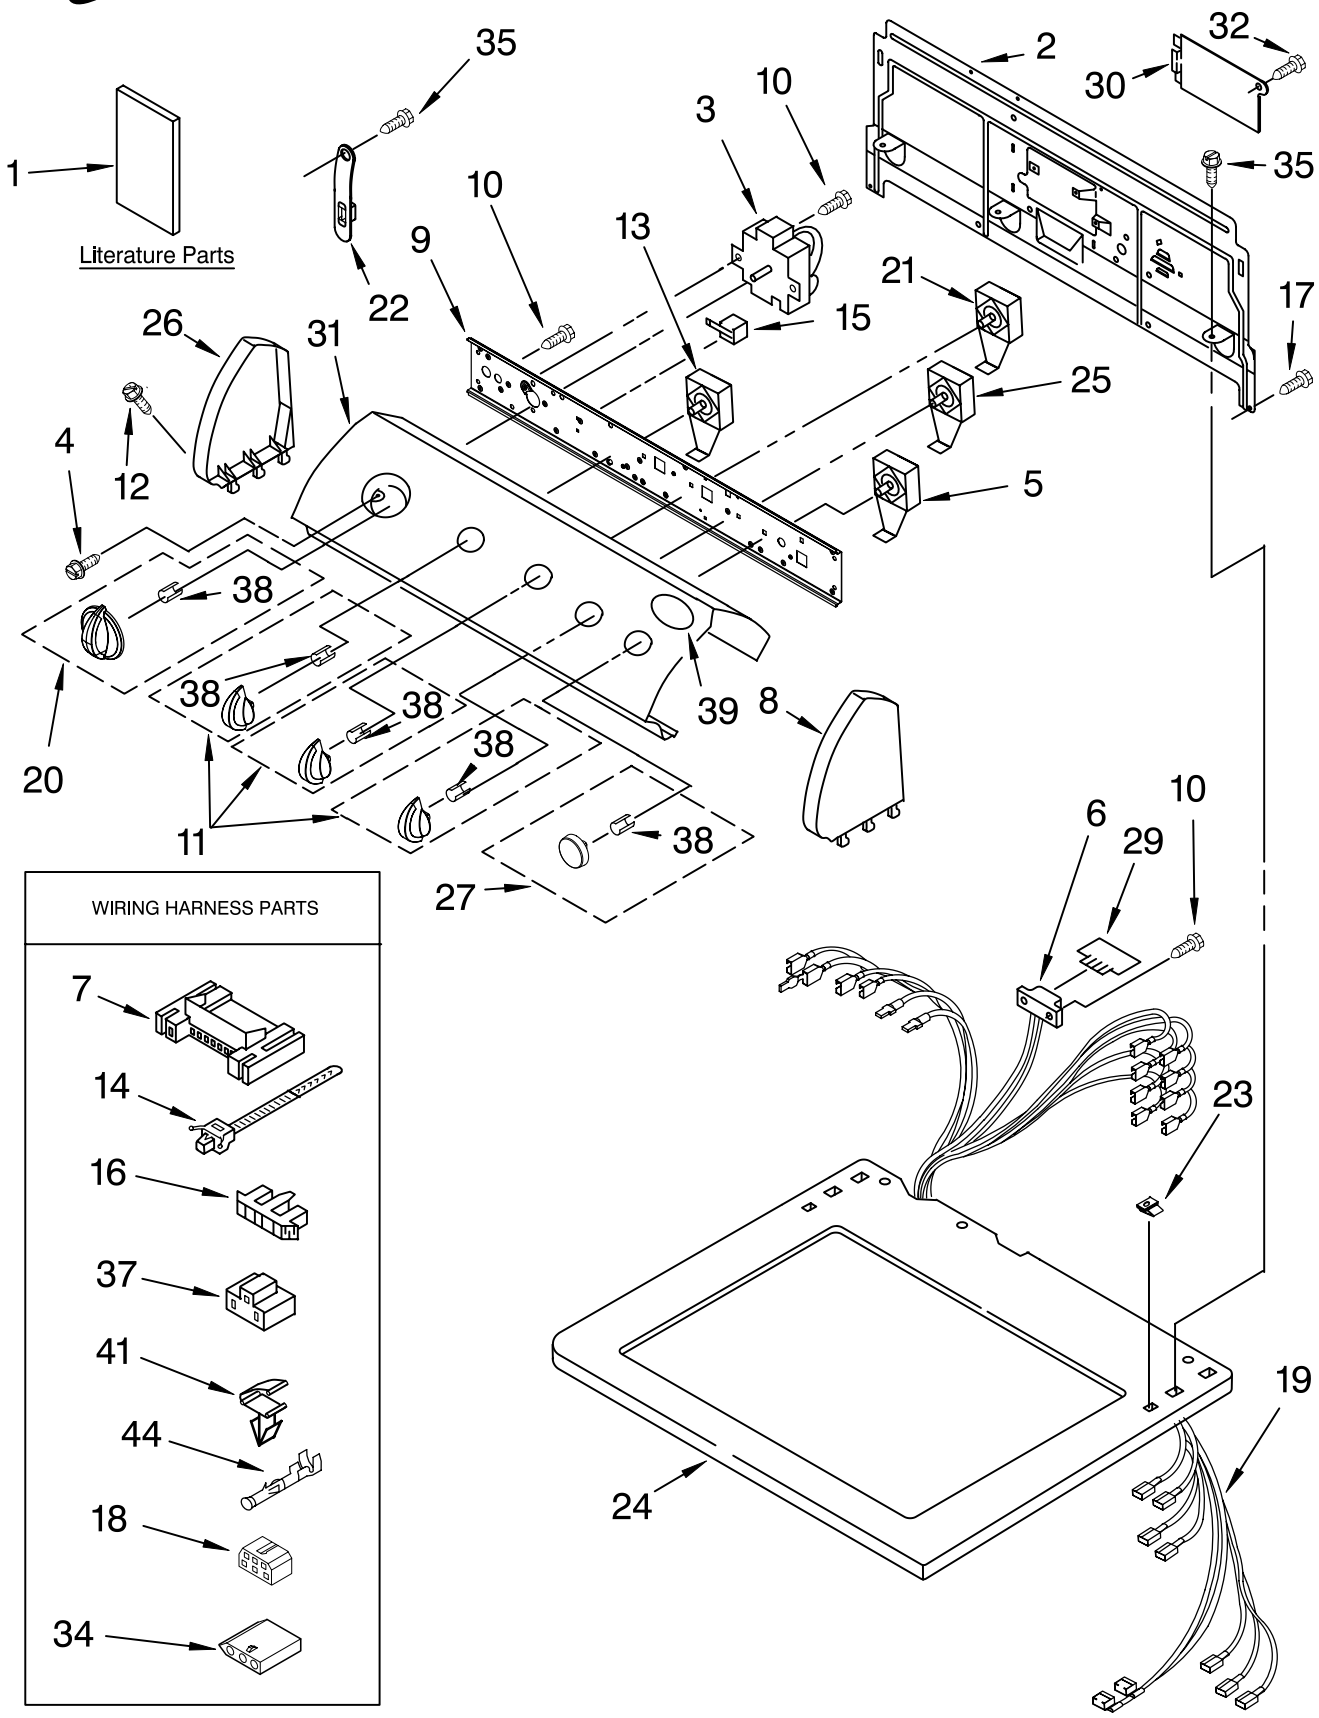

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: GEQ8811PW0, GEQ8811PG0, GEQ8811PL0
(White/Grey) (Biscuit/Gold) (Pewter)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8541831	Wiring Diagram
	8533770	Sheet, Cycle Feature
	8533772	Guide, Use & Care
	8535833	Instructions Installation
		Following May Be Purchased
		DO−IT−YOURSELF REPAIR MANUALS
	677818	Manual, Do−It−Yourself Repair (Dryer)
2	8317305	Panel, Rear Console
3	3406725	Timer, 60 Hz.
4	3400859	Screw, Grounding (8−18 x 7/32)
5	3398094	Switch, Push−To−Start
6	3391885	Connector, Edge
7	3395683	Connector (Motor)
8		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
	3956023	Grey
9	8544897	Bracket, Control
10	3390646	Screw, 8−18 x 5/16
11		Knob, Control (3)
	8544937	Grey
	8544938	Biscuit
12	388326	Screw, Console
13	8528330	Switch, Temperature
14	3391018	Tie, Cable
15	694419	Buzzer, Mini
16	3397269	Connector, Timer
17	693995	Screw, 8−18 x 3/8
18	3347243	Connector, 6−Circuit
19	8299956	Harness, Electric
20		Timer Knob Assembly
	8544957	Grey
	8544958	Biscuit
21	3405154	Switch, Wrinkle Shield
22	8318255	Strap, Console
23	357213	Nut, Push−In (2)
24		Top
	8535848	White
	8535849	Biscuit
	8546092	Grey
25	3405152	Switch, End Of Cycle
26		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
	3956024	Grey
27		Knob, Push−To−Start
	8544941	Grey
	8544942	Biscuit
29	3390537	Control, Electronic
30	8317342	Cover, Terminal Block
31		Panel, Control (Includes Illus. 39)
	8546001	Grey
	8546002	Gold
32	3390814	Screw, 8−18 x 3/8
34	3936144	Connector
35	3390647	Screw, 8−18 x 1/2
37	3401144	Connector (PTS Relay)
38	8536939	Spring Clip
39	8533990	Medallion
41	3394427	Clip, Harness
44	94614	Terminal

CABINET PARTS

For Models: GEQ8811PW0, GEQ8811PG0, GEQ8811PL0

(White/Grey) (Biscuit/Gold) (Pewter)

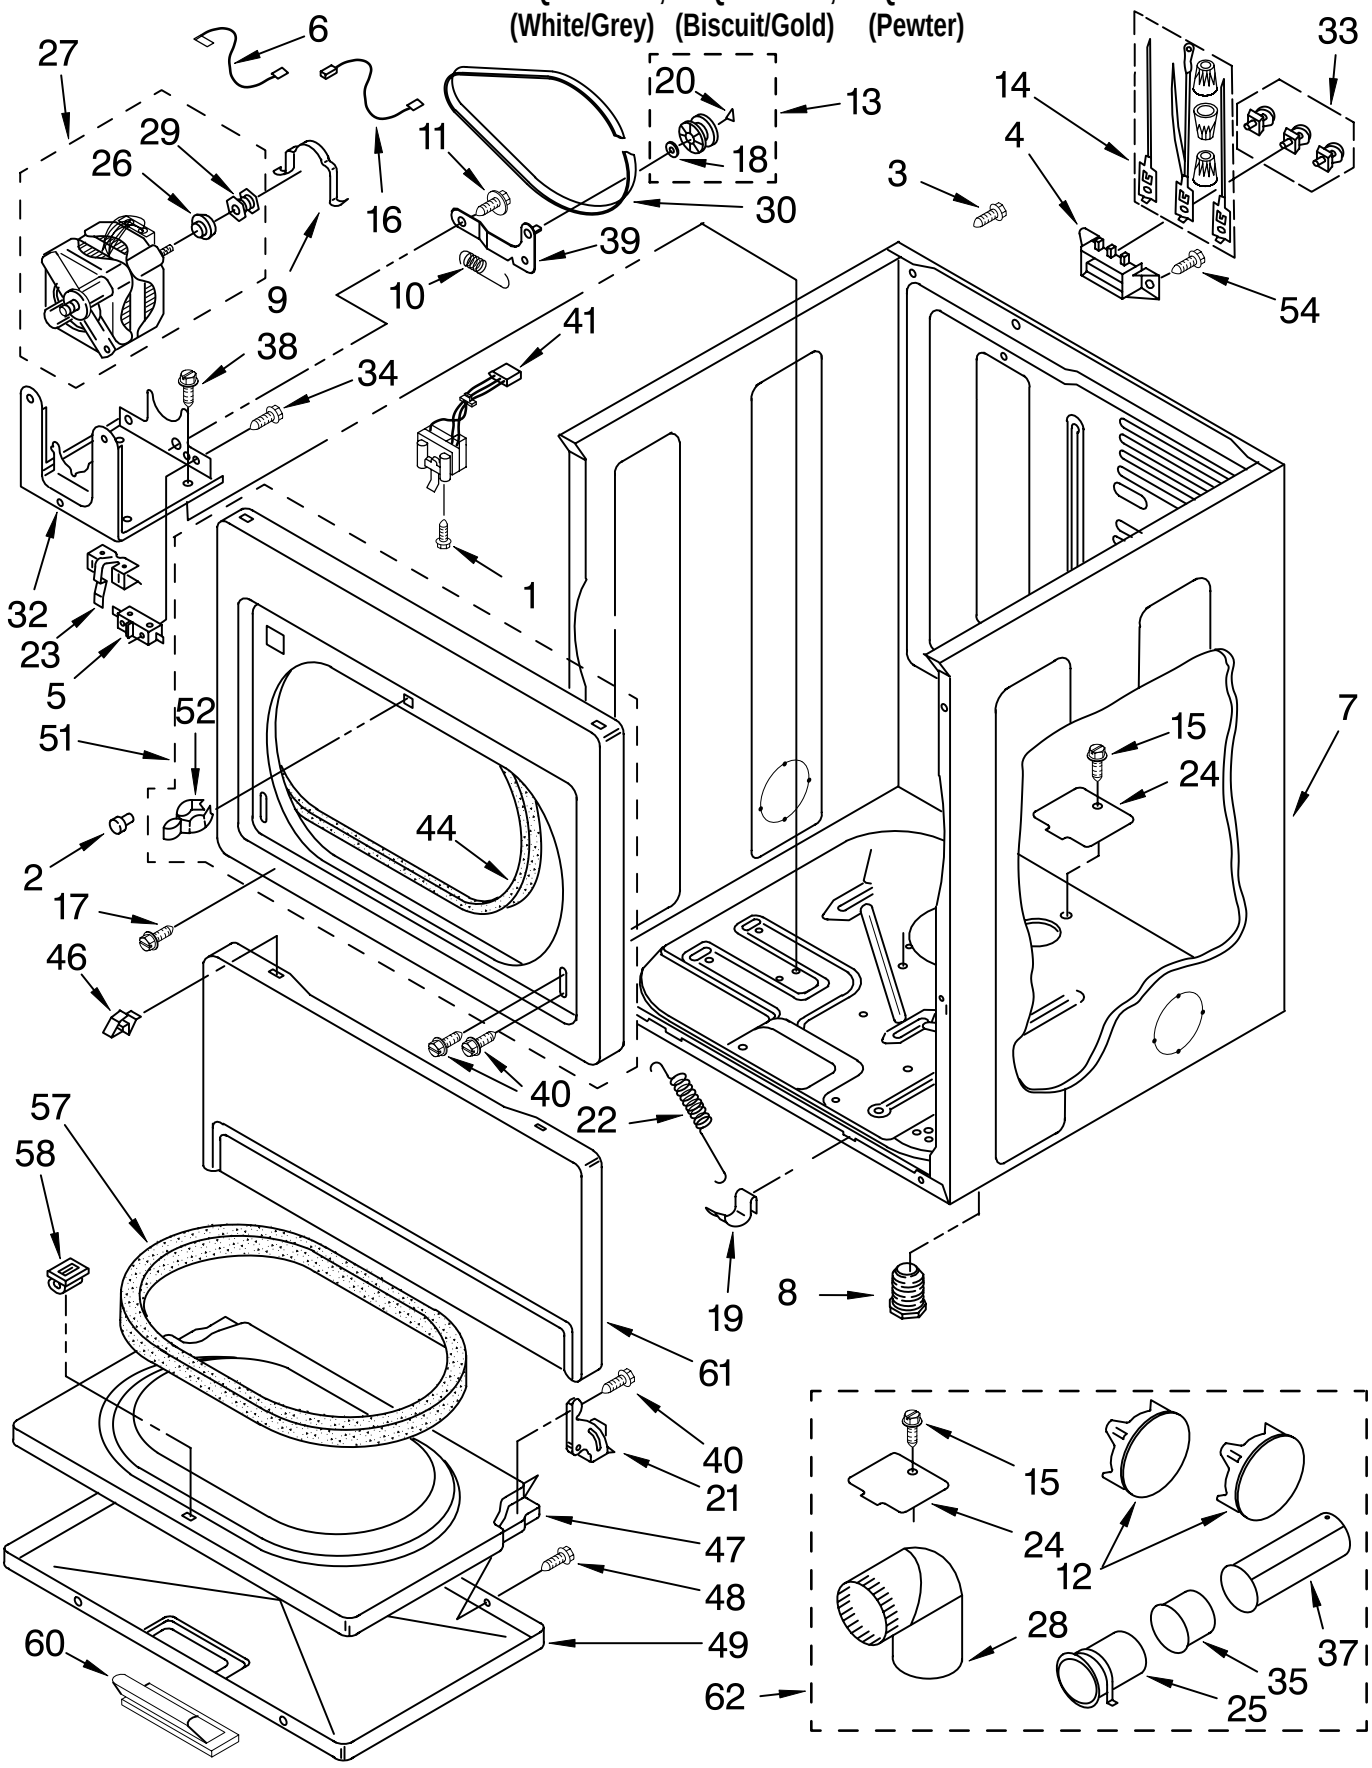

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: GEQ8811PW0, GEQ8811PG0, GEQ8811PL0

(White/Grey) (Biscuit/Gold) (Pewter)

Illus. No.	Part No.	DESCRIPTION
1	697773	Screw, 6−20 x 7/8
2	693152	Bumper
3	697776	Screw, 10−32 x 5/8
4	3397659	Block, Terminal
5	3394881	Switch, Broken Belt
6	3398948	Wire, Jumper (Broken Belt Switch)
7		Cabinet
	8310656	White
	8310659	Biscuit
	8528155	Grey
8	3392100	Foot, Dryer
	279810	Foot − Optional (Extended Length Package Of 2) (Not Included)
9	660658	Clamp, Motor (2)
10	3387374	Spring, Idler
11	3389420	Retainer, Idler
12		Plug, Multivent
	697750	White
	3388311	Biscuit
	3979261	Grey
13	3388672	Pulley Assembly
14	279318	Terminal, Brass & Tinned (3) (Includes Illus. 33)
15	3390647	Screw, 8−18 x 1/2
16	3394081	Wire, Belt Switch
17	8281212	Screw, 8−18 x 3/8
18	233520	Washer, Thrust
19	297092	Clip (2)
20	690997	Tri Ring
21	3387560	Hinge, Door (R.H.)
	3387559	Hinge, Door (L.H.)
22	3387565	Spring, Door (2)
23	8066120	Lever, Snap Switch
24	3394331	Cover−Plate
25	3395532	Exhaust Pipe & Bracket
26	3393657	Restrainer, Belt
27	8538263	Motor, Assembly 60 HZ.
28	49026	4" − 90° Elbow
29	3389729	Pulley 60 HZ.
30	3387610	Belt, Drive
32	3387118	Bracket, Motor
33	279393	Terminal Block Screw Kit (For Terminal Block)
34	98129	Screw, 6−20 x 1 3/8
35	3395534	Exhaust Pipe (Short)
37	3395535	Exhaust Pipe (Long)
38	3390663	Screw, 10−16 x 1/2
39	3388674	Idler Bracket
40	3357011	Screw, 10−16 x 1/2
41	3406107	Door Switch Assembly
44	3387242	Seal, Front Panel
46	3388229	Retainer
47	697655	Door, Rear
48	694091	Screw, 8−18 x 3/8
49		Door, Front
	8521938	White
	8521939	Biscuit
	8521936	Grey
51		Upper Front Panel
	697227	White
	3977761	Biscuit
	3979198	Grey
52	696144	Strike, Door
54	3393008	Screw, 10−16 x 1/2
57	3390736	Seal, Door
58	690081	Catch, Door Assembly
60		Handle, Door
	3979726	Sage
	3979727	Grey
61		Toe, Panel (Includes Illus. 2)
	697215	White
	3977764	Biscuit
	3979197	Grey

Optional Parts Not Included

Dryer Exhaust Kit (For Side & Bottom Venting)

62	279818	White
	279925	Biscuit
	279969	Grey

BULKHEAD PARTS

For Models: GEQ8811PW0, GEQ8811PG0, GEQ8811PL0

(White/Grey) (Biscuit/Gold) (Pewter)

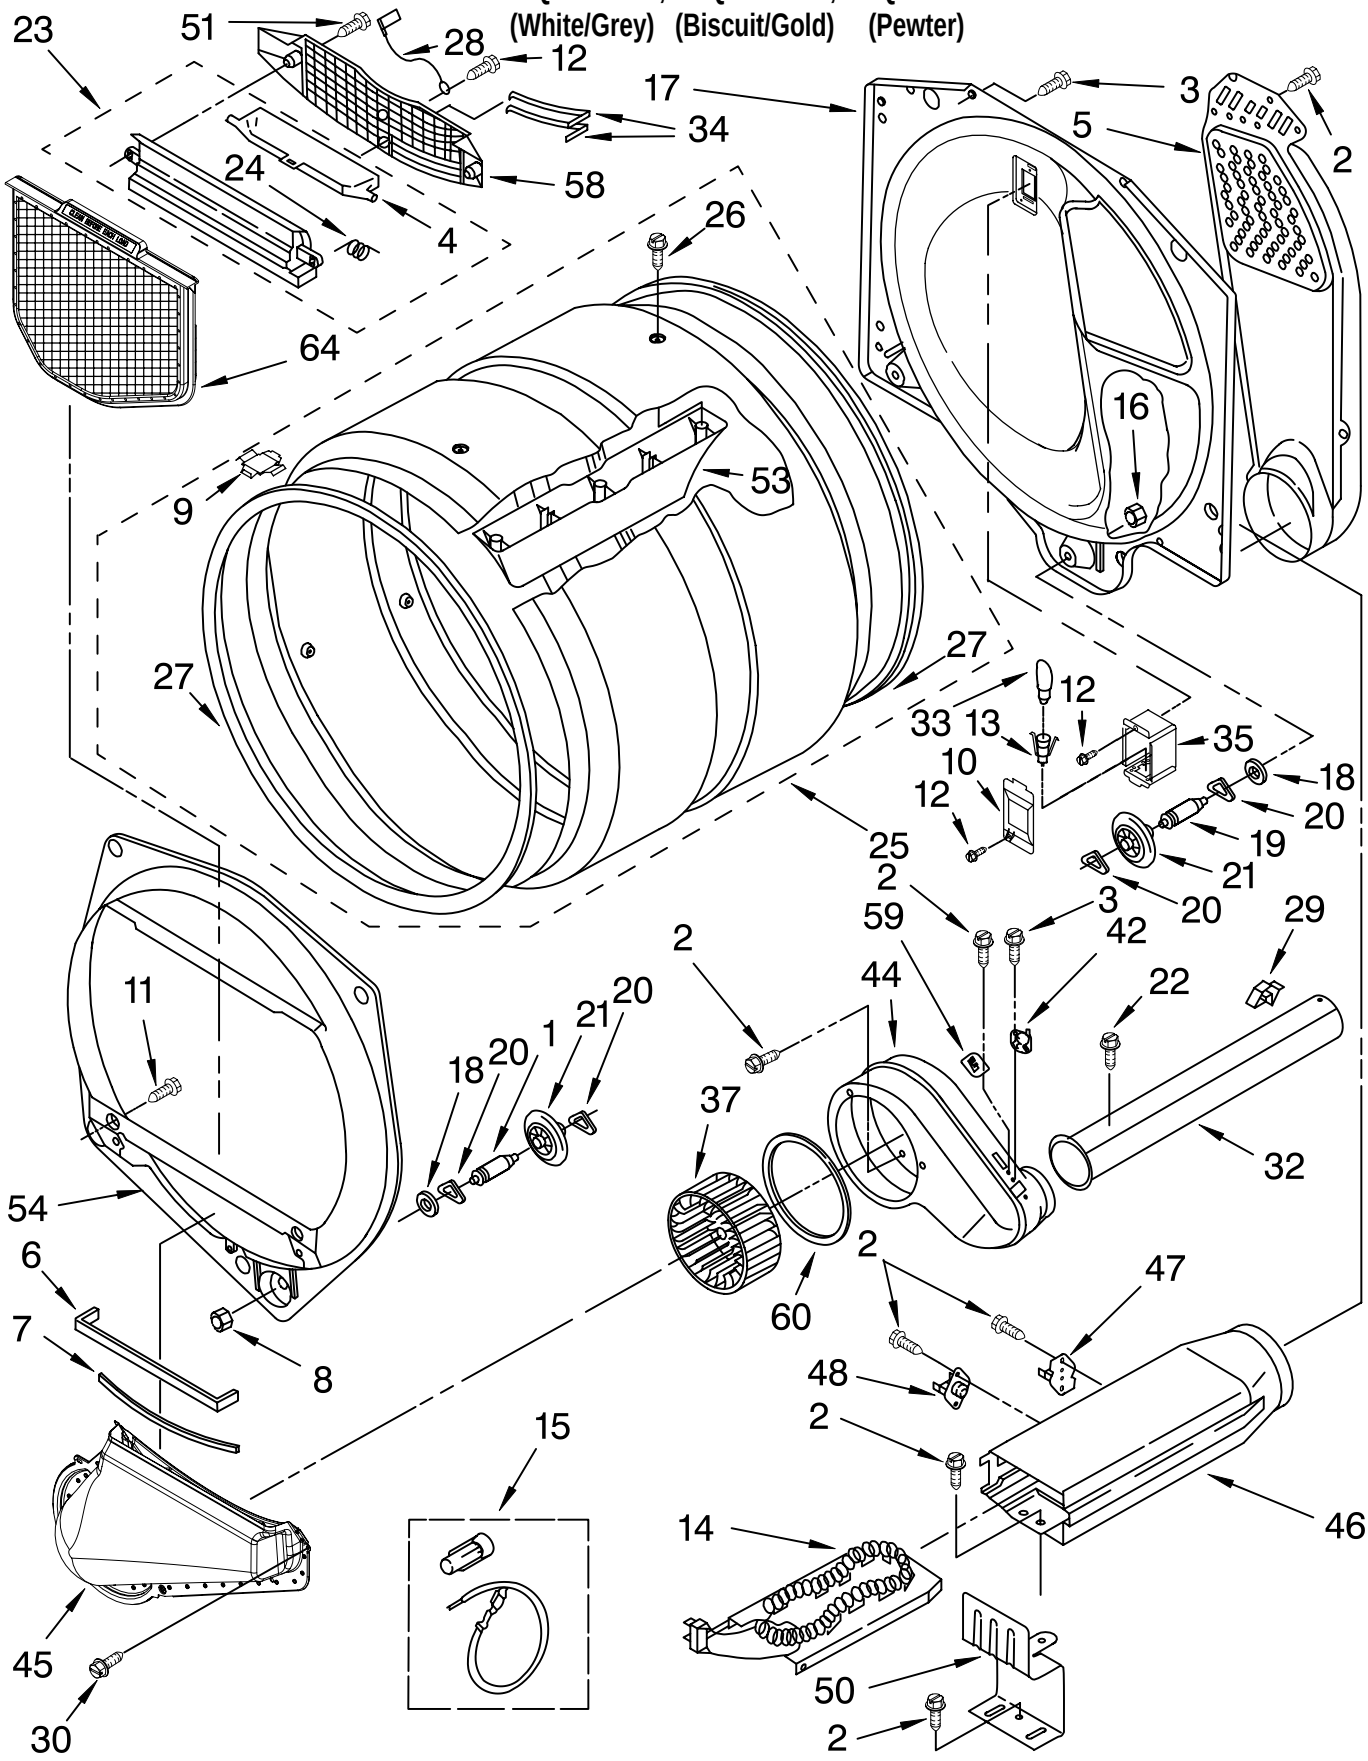

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: GEQ8811PW0, GEQ8811PG0, GEQ8811PL0
(White/Grey) (Biscuit/Gold) (Pewter)

Illus. No.	Part No.	DESCRIPTION
1	3399508	Shaft, R.H. Thread
2	90767	Screw, 8−18 x 3/8
3	3390647	Screw, 8−18 x 1/2
4	3394984	Door, Lint Screen
5	697354	Air Duct Assembly
6	697813	Seal, Outlet Housing
7	697814	Seal, Drum Front
8	3359452	Nut,3/8 x 16(R.H.)
9	8066086	Drum Hole Plug
10	3402841	Lens, Drum Light
11	695240	Screw, 8−18 x 1/2
12	487909	Screw, 8−15 x 1/2
13	3403634	Socket, Light
14	3387747	Heater Element
15	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
16	3387709	Nut, 3/8−16 (L.H.)
17	8520836	Bulkhead, Rear
18	3387459	Washer, Support
19	3399509	Shaft, L.H. Thread
20	690997	Ring, Tri
21	8536973	Roller, Support
22	3390646	Screw, 8−18 x 5/16
23	3394985	Outlet Housing Assembly
24	3394986	Spring, Lint Screen Door
25	8318215	Complete Drum Assembly
26	97787	Screw, 11−16 x 3/4
27	697694	Seal, Drum
28	3392258	Wire, Ground (Sensor)
29	3388229	Clip
30	359625	Screw, 8−18 x 1/2
32	8318486	Exhaust Pipe
33	3406124	Bulb, Light
34	3387223	Electrode, Sensor
35	3977373	Bracket, Drum Light
37	697772	Wheel, Blower
42	8318268	Thermostat, Internal−Bias
44	8544362	Housing, Blower
45	8066168	Lint Duct Assembly
46	3392537	Heater Box
47	3977394	Thermal Cut−Off (Includes Illus. 48)
48	3390291	Thermostat 250°F (121°C)
50	8066099	Bracket, Heater Box
51	3387230	Screw, 10−16 x 1
53	697693	Baffle, Drum
54	697557	Bulkhead, Front
58	8299979	Grill, Outlet
59	3392519	Thermal Fuse
60	697770	Seal, Cover Plate
64	8066170	Lint, Screen

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION

ACCESSORY PARTS

4392067	Kit, Dryer Repair
3406911	Dry Rack
8522199	Kit, Dryer Vent Testing

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit
4396174	Pewter

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
4396175	Pewter
350938	Primer, Gray

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST